




MIDI BOX ONE

QUICK START GUIDE

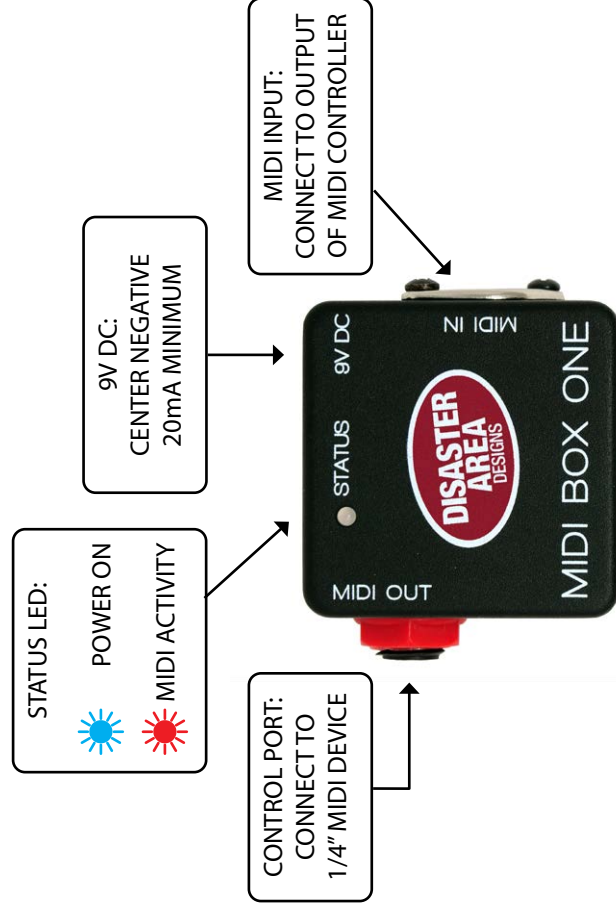

CONTROL PORTS: USE SWITCHES TO CONFIGURE

SLIDE SWITCH TOWARDS **ON** TO ACTIVATE TIP, RING, OR BOTH.

CHASE BLISS DEVICES USE RING ACTIVE, TIP OFF.


MOST OTHERS USE TIP ACTIVE, RING OFF





MIDI BOX ONE

QUICK START GUIDE

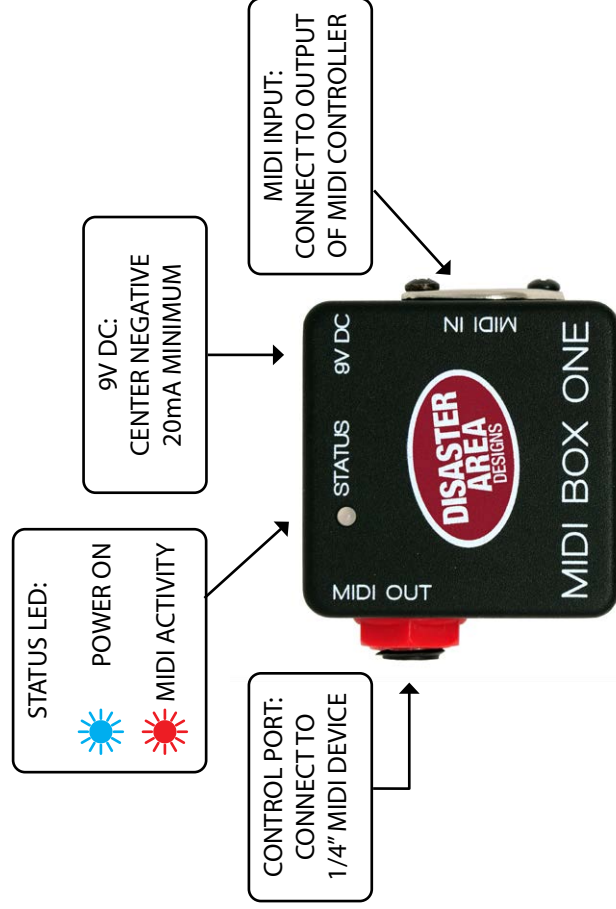

CONTROL PORTS: USE SWITCHES TO CONFIGURE

SLIDE SWITCH TOWARDS **ON** TO ACTIVATE TIP, RING, OR BOTH.

CHASE BLISS DEVICES USE RING ACTIVE, TIP OFF.

MOST OTHERS USE TIP ACTIVE, RING OFF

